ZANUSSI

ZK 24 FX
FRIDGE FREEZER

INSTRUCTION BOOKLET

Important Safety Information

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. If you are unsure of the meanings of these warnings contact the Customer Care Department.

Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall, but leaving the required distance for ventilation, as stated in the installation instructions.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.

Child Safety

- Do not allow children to tamper with the controls or play with the product.
- Keep all packaging material away from children.

During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only. It is not intended for commercial or industrial use.
- Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the refrigerator.
- Frozen food should not be refrozen once it has thawed out.
- Do not place carbonated or fizzy drinks in the freezer compartment.
- Ice lollies can cause frost/freezer burns if consumed straight from the freezer compartment.
- Do not remove items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Bottles and cans must not be placed in the freezer compartment as they can burst as the contents freeze.
- Manufacturers' recommended storage times should be adhered to. Refer to the relevant instructions.

Maintenance and Cleaning

- Before cleaning, always switch off the appliance and disconnect from the electrical supply.
- When unplugging always pull the plug from the mains socket, do not pull on the cable.

Servicing

- This product should be serviced by an authorised engineer and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction. Contact your local Zanussi Service Force Centre.

Contents

Instructions for the User

Important Safety Information **2**

Description of the Appliance **4**
Thermostat Controls 5
Ice Maker 5
Water Dispenser 5

Using the Appliance **6**
Before use 6
To Start the Appliance 6
Food Storage 6
Frozen Food Storage 7
Freezing Fresh Food 7
Ice and Water Dispenser 7

Hints and Tips **8**
Food Storage 8
Energy Saving Advice 8
In the event of a Power Failure 8

Maintenance and Cleaning **9**
Internal Cleaning 9
Defrosting 9
Changing a Light Bulb 9
Ice Dispenser 9
External Cleaning 10
When the appliance is not in use 10

Something Not Working ? **11**

Service & Spare Parts **12**

Customer Care **12**

Guarantee Conditions **13**

Instructions for the Installer

Technical Specifications **14**

Door Removal **15**
To remove the Freezer Door 15
To remove the Fridge Door 16

Installation Requirements **17**
Ventillation 17
Levelling 17

Electrical Connection **18**

Water Connection **19**

Description of the Appliance

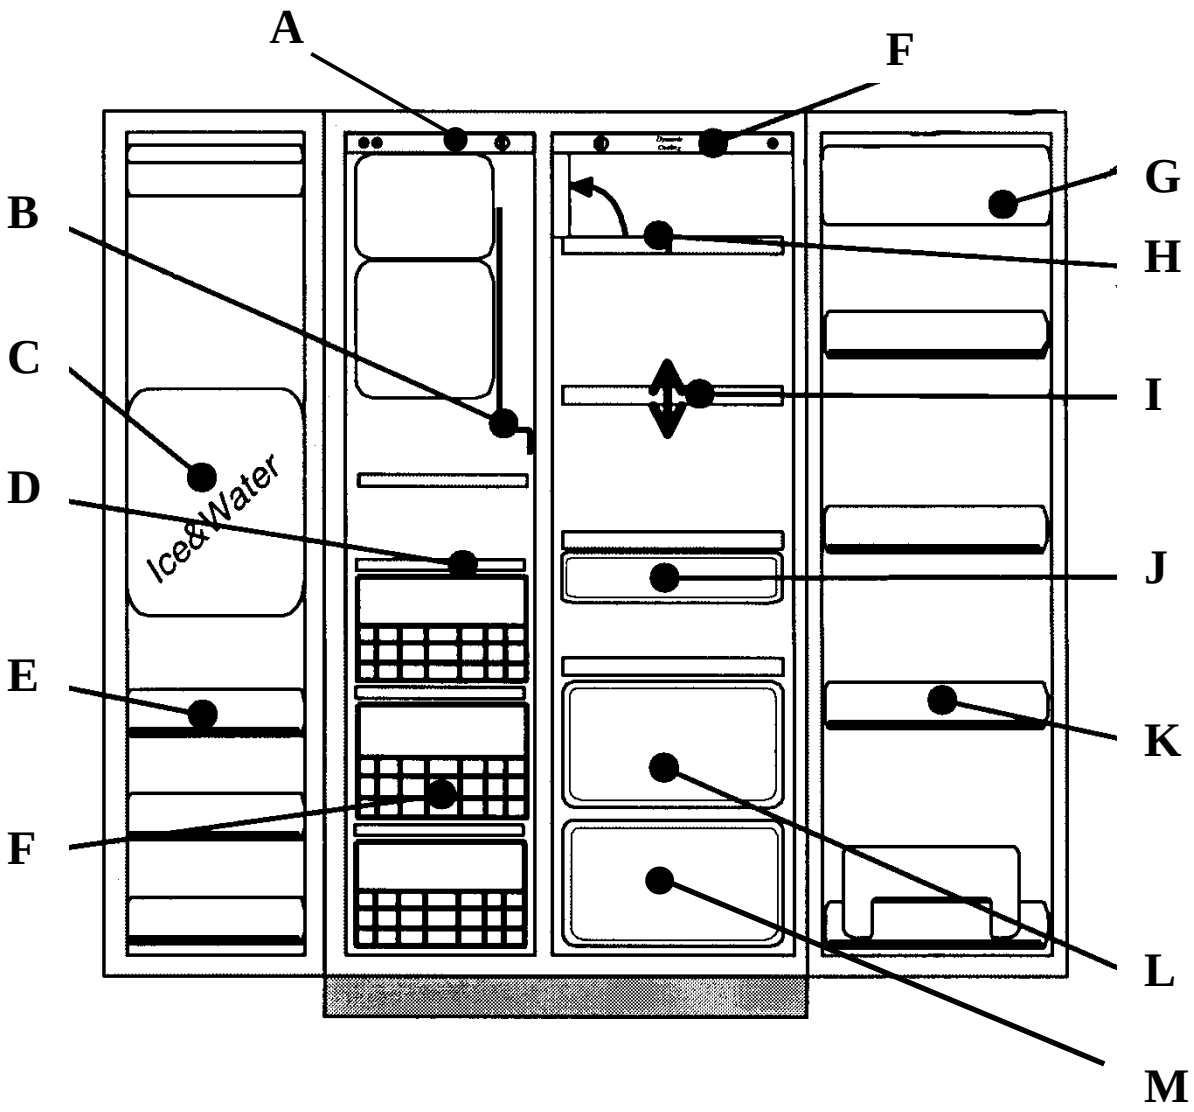

Freezer Compartment

A Control panel
B Pizza shelf
C Water, Ice Cubes & Crushed Ice
D Slide out wire shelf
E Adjustable storage compartment
F Slide out freezer basket

Refrigerator Compartment

F Control panel
G Dairy compartment
H Flip & Slide glass shelf
I 'Spillsafe' adjustable shelf
J Deli Drawer
K Adjustable door storage compartments.
L Crisper
M Meat drawer

Thermostat Controls

A thermostat control is located in the top panels inside the freezer and refrigerator compartments, which controls the temperature inside the freezer and refrigerator respectively.

The Freezer Temperature Control

The thermostat control located inside the freezer regulates the temperature within the freezer compartment. A change in the control setting in the freezer compartment could affect the temperature in the refrigerator compartment under certain circumstances.

Off - Switches off cooling to the appliance
Coldest - Maximum coldness
Cold - Minimum coldness

An intermediate position is usually the most suitable, although the temperature will be affected by:

- Room temperature
- How often the door is opened
- How much food is stored
- Position of the appliance

In determining the correct temperature control setting all these factors have to be considered and some experimentation may be necessary.

When altering the temperature settings, allow 24 hours for the temperature to stabilise before making further changes.

Important

Turning the freezer control to “OFF” will shut down cooling in BOTH the refrigerator and the freezer compartments.

The Refrigerator Temperature Control

The thermostat control located inside the fridge regulates the temperature within the fridge compartment, by regulating the cold air flow.
A setting midway between coldest and cold is usually the most suitable, although some experimentation may be necessary to obtain the correct temperature.

Coldest - Maximum coldness
Cold - Minimum coldness

Ice Maker

The ice maker is located behind the baffle in the top of the freezer.

Once the freezer temperature is cold ice making can be started.

To start ice making, lift the flap to allow access to the wire signal arm and lower it to the ‘ON’ position.

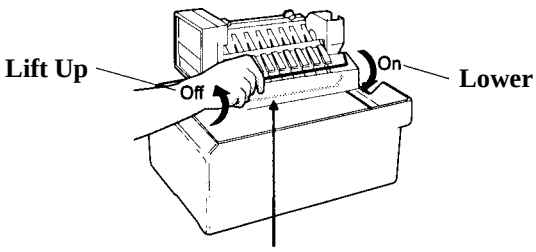

Wire Signal Arm

To stop ice making raise the wire signal arm to the “OFF” position.

Water Dispenser

A water tank is located at the back of the refrigerator compartment and holds approximately 1.5 ltrs (48fl oz) of water.

To fill the water tank after installation:

Ensure the selector is positioned to “Water”. Draw and discard one glass of water. This action will fill the tank, it will take approximately 1 ½ minutes. Continue to draw and discard 7 more glasses of water to ensure that all plumbing connections have been rinsed.

The tank automatically refills as water is dispensed.

To ensure fresh tasting water, we recommend you use the water dispenser daily.

Using the Appliance

This appliance is designed for domestic use only, specifically for storage of edible foodstuffs.

This appliance is designed to operate in ambient temperatures (surrounding air temperature) between 16°C and 32°C. If these temperatures are exceeded i.e. colder or warmer, the appliance will not operate correctly.

Before Use

Remove all securing tapes, and any transit packaging. Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5ml to 0.5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.

Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol.

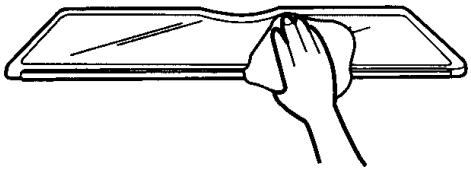

To Start the Appliance

1. Allow the appliance to stand for 2 hours after installation.
2. Plug in the appliance and switch on at the mains supply. DO NOT use an extension lead or adaptor.
3. Set the fridge and freezer controls to **MIDWAY** between cold and coldest. Adjust after 24 hours if necessary.
4. Allow the refrigerator to operate with the doors closed for at least 8 hours before loading with food.

Food Storage

To obtain the best performance from your appliance, do not store warm food or evaporating liquids in the refrigerator. Cover or wrap food particularly if it has a strong flavour.

Refrigerator Shelves

To adjust the shelves in the refrigerator compartment, lift the shelf up, unhook and remove (ensure that any blue transit packaging has been removed), reposition as required.

Door Shelves.

The door shelves can be removed for cleaning or adjustment. Lift upwards and reposition as required. If required the tall bottle retainer can be fitted on the shelf.

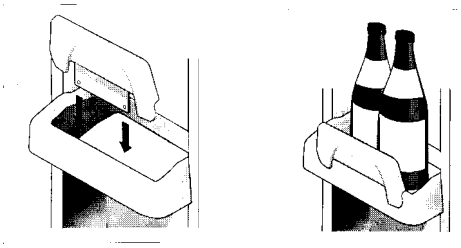

Crisper

Use the Crisper for storing fresh fruit and vegetables. Vegetables should be washed and dried before being placed into the Crisper. A variable humidity control allows you to adjust the storage environment in the Crisper.

Chilled Meat Drawer

Meat, fish and poultry can be kept fresh for longer if placed in the meat drawer. To obtain a cooler temperature slide the control on the side of the cabinet to coldest.

Wine Rack

To install the wine rack, slide the rack onto either side of the shelf with the curve facing inwards. To remove, slide the wine rack out.

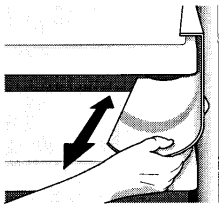

Frozen Food Storage

The freezer door has ** storage compartments and is suitable for the storage of commercially frozen food. Follow the food manufacturer's storage instructions.

The inner freezer compartment is **** and suitable for storage of commercially frozen food and for freezing fresh foods.

Frozen food can be stored in any basket or drawer of the freezer compartment

Do not exceed the storage period indicated by the food manufacturer.

Do not open the door frequently or leave it open longer than is necessary.

Freezing Fresh Food

The maximum quanitity of food you can freeze in 24 hours is 7Kg.

When freezing fresh foods, turn the thermostat control in the freezer to Coldest 2 hours before loading fresh foods.

Place the food to be frozen on the top shelf or in the top drawer.

When the food is frozen turn the thermostat control back to its original position.

⚠ *Do not put carbonated liquids, (fizzy drinks etc), in the freezer compartment.*

⚠ *Water ices, if consumed immediately after removal from the freezer, can cause low temperature skin burns.*

⚠ *Do not remove items from the freezer if your hands are damp/ wet as this could cause skin abrasions or frost / freezer burns.*

Ice & Water Dispenser

The ice and water dispenser on the freezer door dispenses chilled water and ice.

To operate the dispenser:

1. Push the selector to "Water", "Ice Cubes" or "Crushed Ice".
2. Press a glass against the dispensing arm.
3. Remove the glass to stop dispensing.

Note: When dispensing ice, release the dispensing arm before the glass is full and allow the ice chute to clear before removing glass.

The drip tray will catch and evaporate small spills. The drip tray is removable and dishwasher safe.

DO NOT pour water directly into the drip tray, it is not a drain.

IMPORTANT

To ensure fresh tasting water we recommend the water dispenser is used daily.

If the water tank is not used for more than one week flush the tank through, by drawing and discarding approximately 8 glasses of water.

Hints and Tips

Food Storage

- To obtain the best results from your appliance. neither hot foods nor liquids which may evaporate, should be placed in the larder compartment.
- Avoid buying frozen food if you cannot store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Keep the time between buying chilled food and placing it in your fridge as short as possible.
- Do not push food together too much, try to allow air to circulate around each item.
- Do not store food uncovered.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.
- Remove suspect food from your refrigerator and clean, refer to the chapter ‘Maintenance and Cleaning’.

Energy Saving Advice

- Do not install the cabinet close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the cabinet are not obstructed.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Always leave warm food to cool down to room temperature before placing in the fridge or freezer.
- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door closing properly.

In the event of a Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise do not refreeze the food without checking it’s condition. The following guidelines should assist you.

Ice Cream:
Once thawed should be discarded.
Fruit and Vegetables:
If soft should be cooked and used up.
Bread and Cakes:
Can be refrozen without danger.
Shellfish:
Should be refrigerated and used up quickly.
Cooked Dishes:
i.e. casseroles, should be refrigerated and used.
Large Pieces of Meat:
Can be re-frozen providing there are ice crystals remaining within them.
Small Joints:
Should be cooked and then re-frozen as cooked dishes.
Chicken:
Should be cooked and re-frozen as a fresh dish.

Maintenance and Cleaning

Before any maintenance or cleaning work is carried out DISCONNECT the appliance from the ELECTRICITY supply.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

Defrosting

Your appliance is frost free, which means there is no need to manually defrost your appliance as this will be carried out automatically.

Changing a Light Bulb

Ensure the appliance has been disconnected from the mains supply before changing a light bulb. Turning the thermostat control to the "OFF" position does not disconnect the appliance.

It is adviseable to wear gloves or use a cloth when changing a light bulb.

Refrigerator Compartment

Unscrew the old bulb and replace with a 220-240 Volt, 40W bulb with an E27 screw thread.

Freezer Compartment

Remove the hexagonal nut retaining the bulb cover.

Unscrew the old bulb and replace with a 220-240 Volt, 40W bulb with an E27 screw thread.

Ice & Water Dispenser

Unscrew the old bulb and replace with a 220-240 Volt, 7W bulb with an E14 screw thread.

Ice Dispenser

Clean the the dispenser and storage bin periodically.

1. Remove storage bin. Stop ice production (raise signal arm).

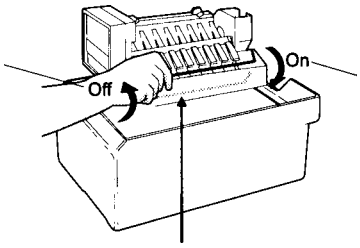

Wire Signal Arm

2. Empty and clean the storage bin with a cloth and mild solution of washing up liquid and water. DO NOT submerge the bin in water or use abrasive cleaners.
3. Remove ice chips, clean the shelf and ice chute.
4. Replace storage bin.
5. Begin ice production again (lower wire signal arm).

Important

The Storage bin should be removed if:

- A power failure causes the ice in the machine to melt and then refreeze, as they may cause the ice making mechanism to jam when the power is resumed.
- The ice maker is not used frequently.

Do not put fingers up the ice chute, there may be sharp edges.

DO NOT rotate the spiral rod, when replacing the ice bin. To realign the spiral rod, rotate it in 90^{o} turn until the ice bin fits into place with the driver mechanism.

External Cleaning

Do not use abrasive products.

There may be sharp edges on the underside of the product so care should be taken when cleaning.

Wipe the outer cabinet with a soft cloth and warm soapy water.

Stainless Steel Doors
Wipe the stainless steel doors with a soft cloth and warm soapy water. Rinse with clean water and dry with a soft cloth.

Clean any stubborn marks with an ammonia soaked paper towel and rinse and dry. Alternatively use a proprietary stainless steel cleaner, following the manufacturer's instructions.

When the appliance is not in use

If the appliance is not in use for a long period.

- Remove all food and ice.
- Turn the thermostat controls to the OFF position
- Disconnect from the electricity supply.
- Raise the wire signal arm (of the ice maker) to the "OFF" position.

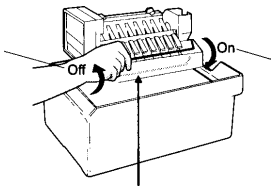

Wire Signal Arm

- Turn off the water supply.
- Clean the interior thoroughly
- Leave both doors open to prevent any odours or mould build-up.

Something Not Working ?

Some problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. If your appliance does not function correctly, please carry out the following checks before contacting your local Service Force Centre.

IMPORTANT: If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made, even if the appliance is under guarantee.

Symptom	Solution
No power to the appliance	Check there is power
	Check there is not a power cut by checking the household lights.
	Check the fuse has not blown
The internal light in the fridge or freezer does not come on	Ensure that the bulb has not blown. Replace the bulb if it has blown Check the door light switch is not jammed.
The temperature in the fridge or freezer section is too high	Check the thermostat is turned to the correct setting relative to ambient conditions.
	Check the ambient temperature is within the appliance's operating limits of 16°C to 32°C. Relocate the appliance if necessary.
The foods in the refrigerator are frozen	Is the temperature control set on high ?
The compressor runs continuously	Check the thermostat is turned to the correct setting relative to ambient conditions.
	Check the doors are closed properly.
	Large quanitites of food have recently been placed in the cabinet and / or door has been frequently opened.
There is an unpleasant odour in the fridge	Check that air ventilation is not obstructed.
	The food was not covered.
The freezer door will not open	Has the door just been opened ? If so leave for a few minutes to allow the air pressure to equalise.

If after the above checks there is still a fault call your local Service Force Centre.

Service & Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Zanussi Service Force Centre by telephoning:

08705 929 929

Your call will be routed to the Service Force Centre covering your post code area. The address of your local Service Force Centre is detailed in the accompanying Customer Care Book.

Before calling out an engineer to a fault, please ensure you have read the details under the heading ‘Something Not Working?’. If you call out an engineer to a fault caused by incorrect use or installation, a charge will be made, even if the appliance is under guarantee.

When you contact the Service Centre you will need to give the following details:

1. Your address and post code
2. Your telephone number
3. Clear and concise details of the fault
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date

Customer Service

For general enquiries concerning your Zanussi appliance or for futher information on Zanussi products, please contact our Customer Care Department:

Customer Care Department
Zanussi
55 - 77 High Street
Slough
Berkshire
SL1 1DZ

08705 727 727

Guarantee Conditions

Standard guarantee conditions:

We Zanussi undertake that if within 12 months of the date of the purchase this Zanussi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.

Home visits are made between **8.30am** and **5.30pm Monday to Friday.** Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This Guarantee does not cover:

Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.

- Costs incurred for calls to put right an appliance improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Zanussi manufacture which are not marked by Zanussi.

This guarantee is in addition to your statutory and legal rights.

European Guarantee:

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, list below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 29 99
Germany	Nurenberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)8 738 79 50
UK	Slough	+44 (0)1753 219897

Installation Instructions

Technical Specifications

Dimensions

Height	1702mm
Width	895mm
Depth	743mm

Capacity

Gross		677 Litres
Net	Fridge	420 Litres
	Freezer **	24 Litres
	Freezer ***	122 Litres

Freezing Capacity / 24 hours 7 Kg

Voltage 230-240V

Frequency 50 Hz

Average Daily Units of Electricity* 2.4Kw

***This figure is based on standard test results in the European Standard EN. Actual consumption will depend on how the appliance is used and where it is located.

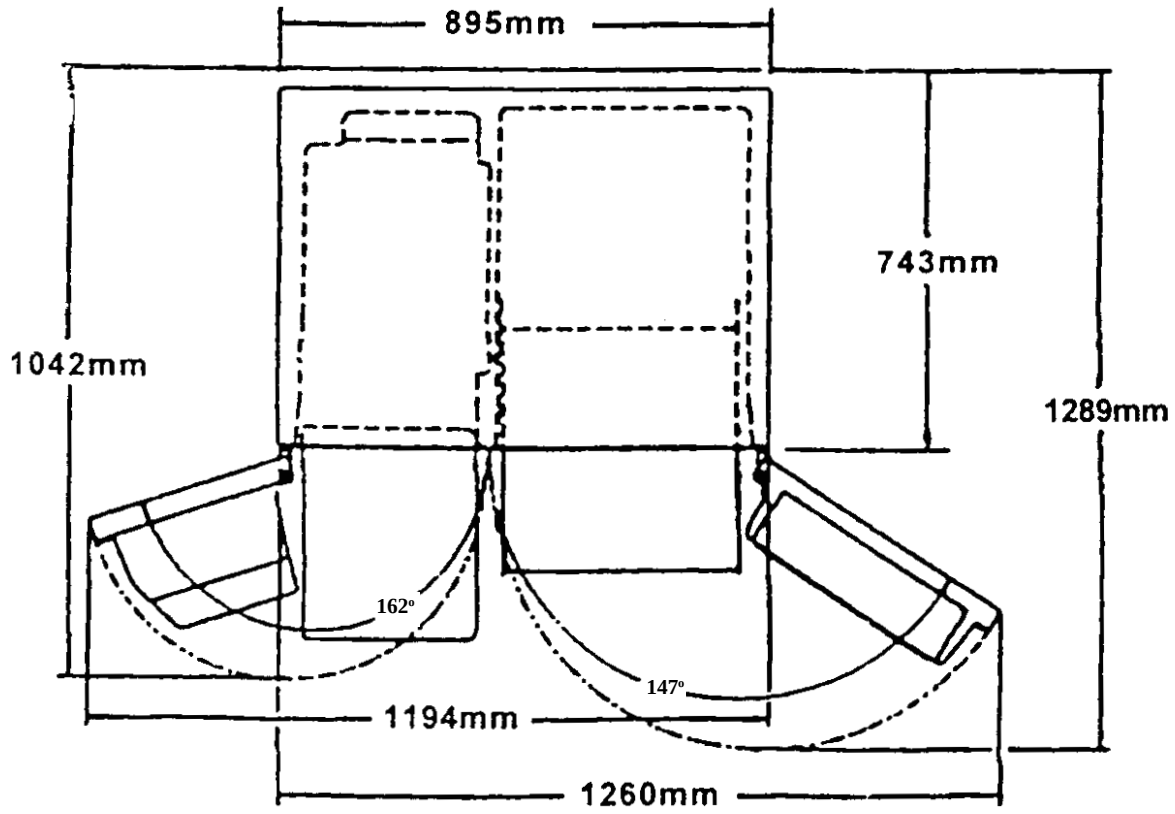

Important
Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

Door Removal

It may be necessary to remove the doors to allow for the delivery or installation of the appliance.

To remove the freezer door:

1. Lift off the plastic top hinge cover.

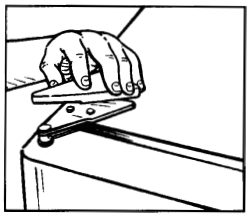

1

2. Trace around top hinge with soft lead pencil for ease of relocation.

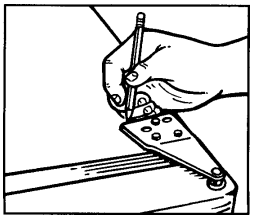

2

3. Grip the corner and centre of base grille and pull off.

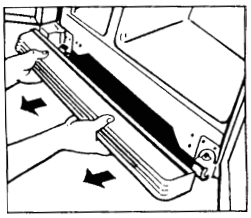

3

4. Remove bottom hinge cover screw. Remove cover.

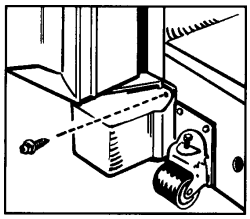

4

5. Gently bend wiring harness connector to disconnect.
   NOTE:Pull on plastic connectors, NOT on wires.

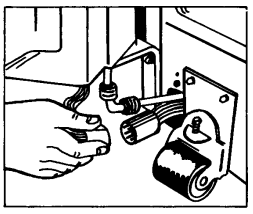

5

6. Disconnect water line by pushing in on grey collar, forcing elbow down off water line from door.

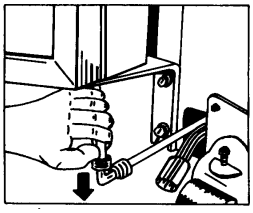

6

7. Open the door to its full position. Tape lower hinge securely to door bottom. Loosen, but DO NOT REMOVE lower screw on bottom hinge. Remove top screw from bottom hinge.

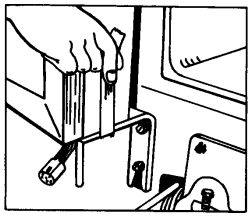

7

8. Remove top hinge screws from the freezer with an anti-clockwise motion.
   Note: Hinge has a minimal spring load. Hold bracket when removing last screw.

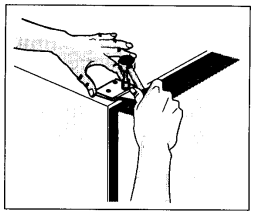

8

9. Lift door off bottom hinge screw.

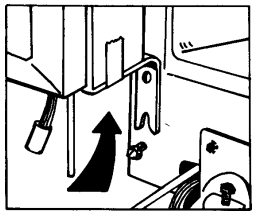

9

To remove the fridge door

10. Lift off the top plastic hinge cover.

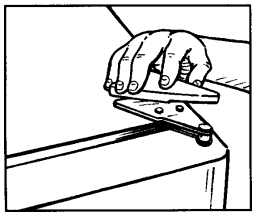

10

11. Remove top hinge screws

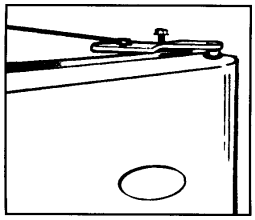

11

12. Lift refrigerator door off bottom hinge. If necessary you can remove bottom hinge by removing grill and hinge mounting screws.

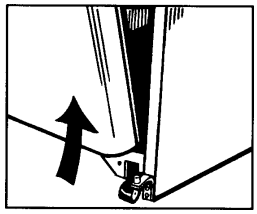

12

13. Set the refrigerator in final location.

14. Refit doors with all shims and washers in original order and tighten screws.

    Note: Do NOT over tighten .

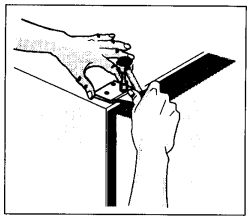

13

15. To reinstall water line elbow, grip door tube firmly and push up on elbow until it touches the black mark on the tube and comes to a stop. This step is critical to ensure that the water line does not leak.

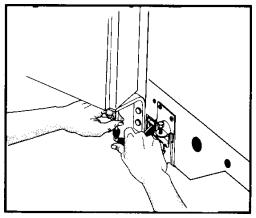

14

16. Check door alignment. The space between the door and cabinet edge (gasket space) should be ¾” at the top hinge.

Installation Requirements

To ensure correct operation of this appliance, it must not be located where the temperatures will fall below 16°C (61°F) or rise above 32°C (90°F).

For correct operation this appliance must be :

- In a dry atmosphere
- Out of direct sunlight
- Away from extreme temperature (not next to a cooker or other source of heat).
- The appliance is heavy when fully loaded, and must be stood on a strong floor.

Avoid the following locations:

- Unheated kitchen
- Outhouse
- Conservatory
- Garage

Ventilation

Allow a 25mm (1 inch) space behind and above the appliance for ventilation.

In a recessed installation, allow an extra 10 - 15mm (½ inch) on each side for ease of installation. If the side of the unit is to be placed against a wall, allow 43mm (1¾ inch) space for proper door opening.

Levelling

The appliance has four castors. The two castors at the front of the appliance should be adjusted to ensure that the cabinet is level.

To adjust the front castors:

1. Open both doors.
2. Remove the base grille by pulling it straight out.
3. Adjust the casters by turning the adjusting bolt with a spanner until the refrigerator is level and stable.

   If the freezer door is higher than the refrigerator door, raise the right corner and/or lower the left corner until the doors align across the top of the cabinet.

   If the refrigerator door is higher than the freezer door, raise the left corner and/or lower the right corner until the doors align cross the top of the cabinet.

The rear castors are not adjustable.

4. Check both doors to ensure that the seals touch the cabinet on all sides.
5. Replace the bottom grille by lining up the retainers with the holes and pushing the grille straight on.

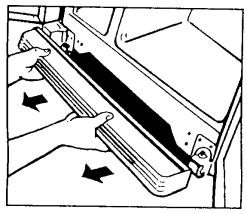

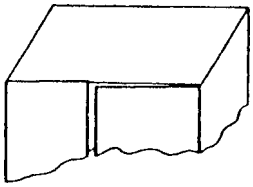

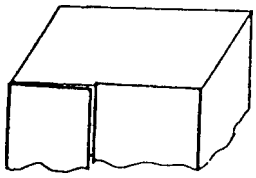

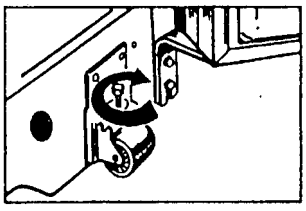

Turn the bolt clockwise to raise

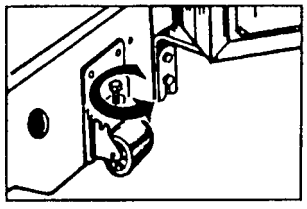

Turn the bolt anti-clockwise to lower

Electrical Connection

Any electrical work required to install this appliance must be carried out by a qualified electrican or competent person.

This appliance must be earthed.

The manufacturer declines any liability should these safety measure not be observed.

Electrical Requirements

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1362) fuse must be used.

Should the plug need to be replaced for any reason. The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	: Earth
Blue	: Neutral
Brown	: Live

The wire coloured green and yellow must be connected to the terminal marked with the letter “E” or by the earth symbol ⏚ or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked ‘N’ or coloured black.

The wire coloured brown must be connected to the terminal marked “L” or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

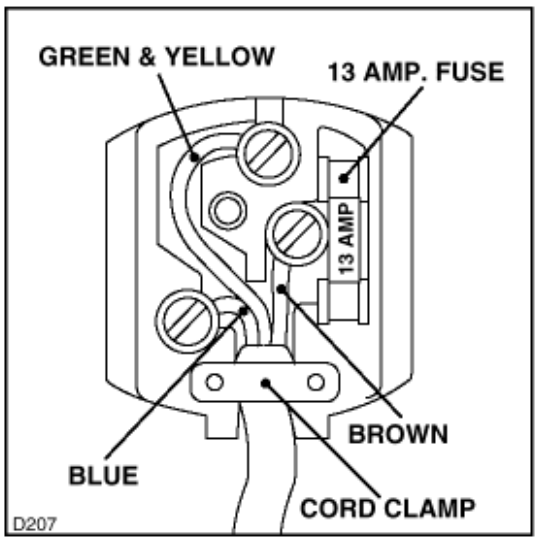

Important
If the mains supply cable is damaged, it must be replaced by a cable available from your local Service Force Centre.

Water Connection

The ice maker water supply tube must be connected a a drinking water supply.

The water supply must have a water pressure within the following limits:

Minimum pressure 2.1 bars (30psi)

Maximum pressure 8.3 bars (120 psi)

The quality of the ice is dependent upon the water quality. It is recommended that the ice maker water is not softened. If the ice maker is connected to softened water ensure the softener is maintained and working correctly.

To connect the water supply:

1. Turn off the water supply and disconnect the appliance from the power supply.
2. Remove the three retaining screws and bend the black cover at the perforations.

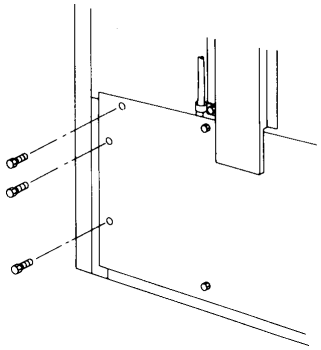

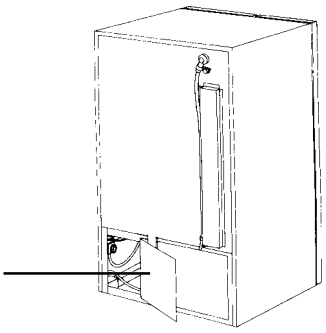

3. Connect the water hose supplied to the water supply connection.

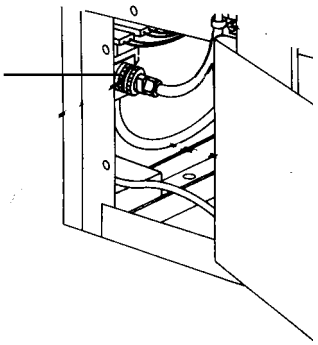

4. Turn on the water supply and check all connections for leaks.
5. Pull the black cover and replace the three retaining screws.
6. Plug in the appliance.

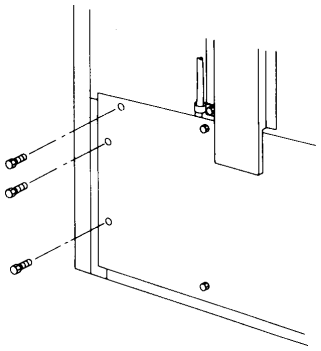

NOTE

- Ice production will begin when the freezer reaches normal operating temperature. See page 5 “Ice Maker” and “Water Dispenser”.
- Air in the plumbing lines after installation may cause the ice maker to cycle two or three times before making a full tray of ice.
- New plumbing may cause ice to be discoloured or have poor flavour. Discard ice made during the first 24 hours.